



DATE : 7-26-43

INSTRUCTIONS

OPERATION Amplifier Model #75 operates on alternating (AC) current only. 110-120 Volts, 50-60 cycle. Never use on direct (DC) current without the use of a converter.

FUSE: The fuse is located in a shock-proof fuse holder (5). To replace fuse, insert screw driver or coin in slot - remove cap - and replace. Replace with a fuse rated at 2 amperes only.

TUBES: This amplifier uses five tubes: - 1 of the 6J7, 1 of the 6N7, 2 of the 6L6G, and 1 of the 5V4G.

NO RESPONSE FROM INSTRUMENT: Check fuse (5) - see that AC (7) plug is connected - see that switch (4) is on - be sure all volume controls are turned up sufficiently. Be sure guitar connecting cable is plugged into amplifier and firmly screwed to the instrument.

